



PULSAR To ZERO88 ADAPTOR

8 pin DIN

8 pin DIN

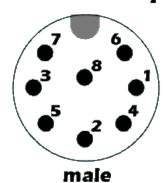

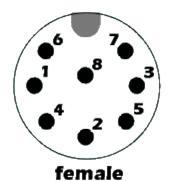

viewed from wiring side

Application	1	2	3	4	5	6	7	8	Notes
Pulsar control	+ve supply	ground	ch 1	ch 2	ch 3	ch 4	ch 5	ch 6	
Zero88 control	ch 1	ch 2	ch 3	ch 4	ch 5	ch 6	supply	ground	

Note most manufacturers follow the Zero88 standard shown here